



Usage instructions Febreze / Ambi Pur Adjustable Diffuser & Fragrance **3volution (Type ED33)**



Always keep bottles upright. Use only as indicated.



Remove caps from refill. Do not remove bottles from holder.



Unplug before inserting refill. Click refill into place.



Plug into socket with bottles at bottom. Leave 50cm clear above



Every 45 min a different light shows which fragrance is diffused. (!) Replace refill when empty.

IMPORTANT SAFETY INFORMATION:

 
- Plug your appliance into an alternating current outlet only and make sure that your household voltage corresponds to the voltage marked on your appliance.
- The appliance is only to be used with the recommended vaporizing medium. The use of other substances can cause poisoning or fire. Do not fill bottles with any liquids.
- Switch off at socket overnight (UK) or remove from socket and keep upright overnight (other markets).
- Check the device regularly. As the device uses heat, it will be slightly warm during normal operation. In case of device heating up excessively, out of the ordinary strong smell or smoke, remove from socket immediately.
- Do not open the device. Avoid hard knocks. If diffuser fails or is damaged, remove from socket.
- To clean the appliance, unplug and use dry cloth. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Do not touch with wet hands or metal objects.
- Do not cover or paint unit.
- Do not place on or near polished, painted or plastic surfaces.
- Do not place near a source of heat or direct sunlight. For indoor use in ventilated areas.
- Do not use in confined spaces.
- Wipe up any spills immediately.
- Remove from socket and replace refill when empty.
- Always keep refill upright (see arrows UP in the back of device). Use only as indicated.
- Leave min. 50 cm clear above diffuser.
- Do not cover or place behind curtains.
- Do not use with extension cords or multiplug adapters.



Usage instructions Febreze / Ambi Pur Adjustable Diffuser & Fragrance 3volution (Type 3263)



Always keep bottles upright. Use only as indicated.



- 1. Unscrew all caps from refill. Do not remove bottles from bottle holder.
- 2. Unplug device before inserting refill. Insert refill and click into place.
- 3. Always plug into socket with bottles at bottom. To avoid leakage, never plug nor turn device upside down.
- 4. Device automatically diffuses another fragrance periodically, as indicated by different led lights.
- 5. All lights will flash simultaneously when refill is running empty. Take action to replace refill (and reset signal).

IMPORTANT SAFETY INFORMATION:

- Plug your appliance into an alternating current outlet only and make sure that your household voltage corresponds to the voltage marked on your appliance.
- The appliance is only to be used with the recommended vaporizing medium. The use of other substances can cause poisoning or fire. Do not fill bottles with any liquids.
- Switch off at socket overnight (UK) or remove from socket and keep upright overnight (other markets).
- Check the device regularly. As the device uses heat, it will be slightly warm during normal operation.
 In case of device heating up excessively, out of the ordinary strong smell or smoke, remove from socket immediately.
- Do not open the device. Avoid hard knocks. If diffuser fails or is damaged, remove from socket.
- To clean the appliance, unplug and use dry cloth. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Do not touch with wet hands or metal objects.
- Do not cover or paint unit.
- Do not place on or near polished, painted or plastic surfaces.
- Do not place near a source of heat or direct sunlight. For indoor use in ventilated areas.
- Do not use in confined spaces.
- Wipe up any spills immediately.
- Remove from socket and replace refill when empty.
- Always keep refill upright (see arrows UP in the back of device). Use only as indicated.
- Leave min. 50 cm clear above diffuser.
- Do not cover or place behind curtains.
- Do not use with extension cords or multi plug adapters.



Usage instructions Febreze / Ambi Pur Adjustable Diffuser & Fragrance Mono-chamber



Always keep bottle upright. Use only as indicated.



Remove cap from bottle. Unplug device before inserting bottle. Click bottle into diffuser with logo on front.



Plug into socket with bottle at bottom. Leave 50cm clear above.



Adjust fragrance strength, if required.

IMPORTANT SAFETY INFORMATION:

- Plug your appliance into an alternating current outlet only and make sure that your household voltage corresponds to the voltage marked on your appliance.
- The appliance is only to be used with the recommended vaporizing medium. The use of other substances can cause poisoning or fire. Do not fill bottles with any liquids.
- Switch off at socket overnight (UK) or remove from socket and keep upright overnight (other markets).
- Check the device regularly. As the device uses heat, it will be slightly warm during normal operation.
 In case of device heating up excessively, out of the ordinary strong smell or smoke, remove from socket immediately.
- Do not open the device. Avoid hard knocks. If diffuser fails or is damaged, remove from socket.
- To clean the appliance, unplug and use dry cloth. Cleaning and user maintenance shall not be made by children without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Do not touch with wet hands or metal objects.
- Do not cover or paint unit.
- Do not place on or near polished, painted or plastic surfaces.
- Do not place near a source of heat or direct sunlight. For indoor use in ventilated areas.
- Do not use in confined spaces.
- Wipe up any spills immediately.
- Remove from socket and replace refill when empty.
- Always keep refill upright (see arrows UP in the back of device). Use only as indicated.
- Leave min. 50 cm clear above diffuser.
- Do not cover or place behind curtains.
- Do not use with extension cords or multi plug adapters.